

## *F i r m w a r e   C h a n g e   I n s t r u c t i o n*

**DATE:** July 17, 2009  
**FROM:** Support  
AES Corporation  
**PHONE:** (978) 535-7310 Option 4  
**FAX:** (978) -535-7313

### ***Firmware change instructions; 7068 IntelliTap II:***

These instructions are also appropriate for the original 7067 IntelliTap, 7770 FireTap and any other similar module produced by AES IntelliNet.

1. Remove all power from the IntelliTap II. Unplug the cable from J1.
2. Identify the existing microprocessor, which usually has a label identifying its part number, firmware revision number and date. Determine location of pin 1 or orientation of the micro and carefully remove it. AES suggests using an IC removal tool.
3. Carefully insert the new Micro, paying close attention to orientation and inserting all pins into their correct location in the socket. Check for bent pins, especially those that bend inward under the IC, which typically are difficult to detect.
4. Confirm that the programming jumpers are configured properly.
5. Reconnect and return power to the IntelliTap.
6. Test the functions of the IntelliTap.